


10 Proper use of the printer

Use only as described in this manual. There is a risk of danger and malfunctions may result if the machine is used not in accordance with this manual.

TIPS Print tape and some types are set on the printer at the shipment.

TIPS If 36mm spacer is set into the cassette case, 1 line printing can be done.

In this case, please change the printing line by selector switch.

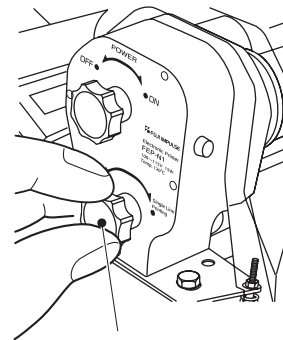


Printing line selector switch

10-1 Turn on the sealer power.

After installing the printer, put the sealer's power cord plug into the outlet and turn on the power.


Refer to the instruction manual for the sealer, before beginning operation.

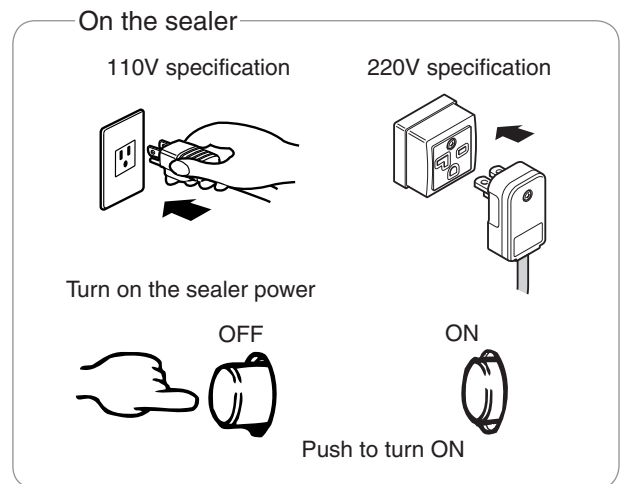

10-2 Turn on the printer power.

Turn the power switch clockwise.

The print tape will be fixed between drive roller and tape pressure roller, and simultaneously, the power lamp turns on.

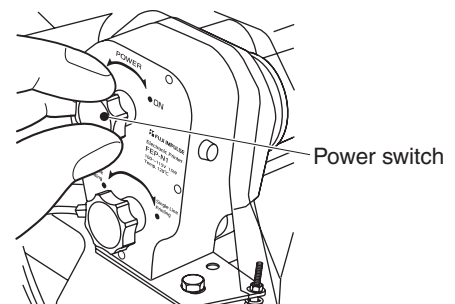

10-3 Wait until a suitable temperature is reached.

Wait for 3-5 minutes until the temperature of types rises to the suitable temperature.


10-4 Operate with the sealer frame.

After the printer becomes hot enough, the sealing and printing operations will be done simultaneously.

The type rubber compression pad (FEP-N1 / on the type contact plate, FEP-OS-N1 and FEP-V-N1 / on the type contact bracket) indicates where printing will take place.

(The right illustration is FEP-N1.)


Rubber compression pad for type

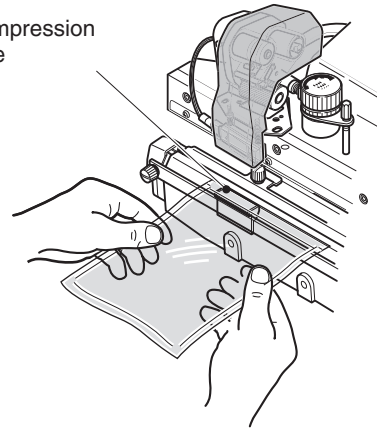

10-5 Check the printing results.


Adjust the height of the type until the clean printing can be done.

Refer to page 24.

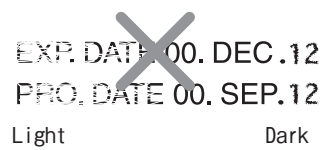

10-6 Turn off the power.

After operation is complete, turn off the power of the printer.

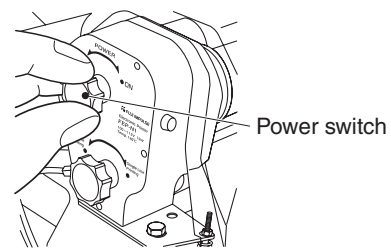

If you do not use the sealer for a long time, pull out the sealer's power cord plug from the outlet.

On the sealer

Turn on the sealer power

Push to turn OFF

 A diagram showing the power switch operation. It includes two parts: "110V specification" and "220V specification". For 110V, a hand is shown pushing the switch to the "ON" position. For 220V, a hand is shown pushing the switch to the "OFF" position. Below the switch, there are illustrations of the power cord being plugged into a wall outlet and then being pulled out.

10-7 Inspect after the end of operation.

Clean the machine and make sure that the parts such as types are not damaged.