

9 Install to the sealer

Since the methods of installing to the sealer differ by FEP-N1, FEP-OS-N1 and FEP-V-N1, please look at the procedure applicable to the model of your printer.

9-1 For FEP-N1

- 1 Open the pressure lever, and fit the drawing spring base into the seal frame.
- 2 Peel off the silver seal on the pressure lever.
- 3 Put the printer base on the pressure lever so that the heater section comes before the pressure lever.
- 4 Fix the printer base on the pressure lever by mounting bolt (M6 : 2pcs).
- 5 Loosen the plastic nut (black) which fix the teflon holder of a sealer.
- 6 Attach the type contact plate on the teflon sheet holder plate(lower).
Since the attachment position(screw hole) is covered by the silver seal, please peel it.
- 7 Return the teflon sheet holder plate(lower) to the initial position.
- 8 Put the power cord(black) into the outlet for the printer.
The outlet is located on the upper back side of the sealer.



Warning Make sure not to put the white power cord plug into the outlet for the printer's power cord plug.

- 9 Secure the power cord plug to the pressure lever with the included plastic band to avoid its interfering with the movement of the pressure lever.

