

7 Proper use of the printer

Use only as described in this manual. There is a risk of danger and malfunctions may result if the machine is used not in accordance with this manual.

7-1 Secure the work space

Be sure to use the printer on the flat and suitable work table.



If the printer is placed on the uneven space or on the corner of a table, it may fall down.

7-2 Preparation




Print tape and some types are set on the printer at the shipment.



If 36mm spacer is set into the cassette case,

1 line printing can be done.

In this case, please change the printing line by selector switch.

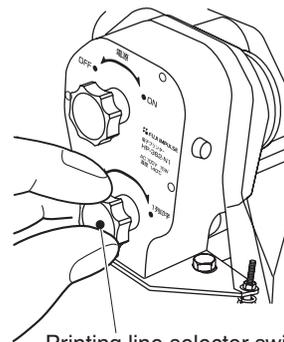


Printing line selector switch

7-3 Connect the power source.

Connect the cord plug certainly to the wall outlet which can

Supply the electric power and voltage indicated in page 3 "Specifications".

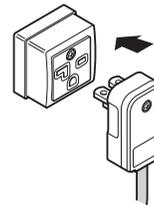


Connecting the power cord to an outlet of a different specification may cause fire etc.

7-4 Turn on the printer power.

Turn the power switch clockwise.

Power lamp will turn on

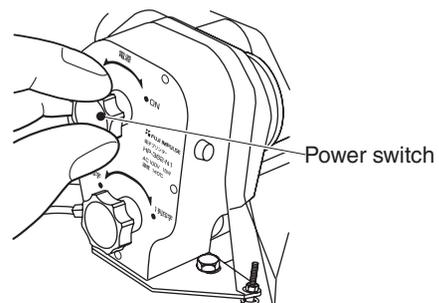


7-5 Wait until a suitable temperature is reached.

Wait for 3-5 minutes until the temperature of types rises to the suitable temperature.

7-6 Push down the hand lever.

After the printer becomes hot enough, push the hand lever for 0.5 – 1 second and printing has been done.

The type rubber compression pad indicates where printing will take place.

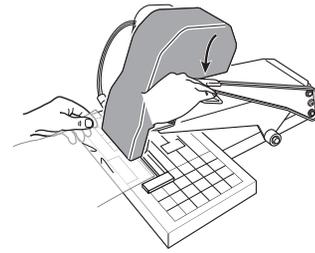


TIPS When the printing must be at the same position every time ...

When the printing must be at the fixed position ...

Use the magnet guide included in accessories.

Set it on the table so that the corner of pouch (film) fits to magnet.

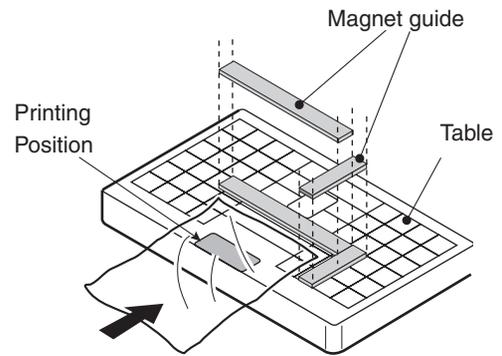

7-7 Check the printing results.

Adjust the height of the type until the printing clean.

Refer to page 14.




Light


Dark

7-8 Turn off the power.

After operation is complete, turn the power switch counter-clockwise.

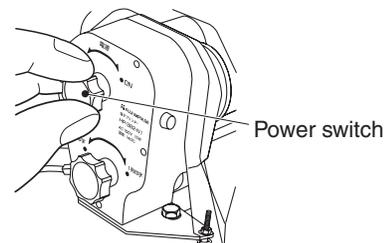

If you do not use the printer for a long time, pull out the power cord plug from the outlet.

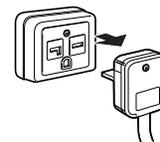

7-9 Inspect after the end of operation.

Clean the machine and make sure that the parts such as types are not damaged.